High-resolution Digimatic Measuring Unit LITEMATIC VL-50-B/50S-B



Catalog No. E13006(2)

Low and constant measuring force of 0.01N, 0.15N, or 1N



Providing low and constant measuring force for high-accuracy inspection of delicate workpieces

LITEMATIC VL-50-B/50S-B

FEATURES

VL-50-B/50S-B

• Patent registered (Japan), Patent pending (Japan)

Ideal for measuring the thickness or height of a workpiece that can be easily affected by the measuring force

- With a measuring force of only 0.01N, the Litematic is ideal for measuring easily deformed workpieces or high-accuracy components.
- For workpieces for which 0.01N is insufficient, either the 0.15N or 1N model is recommended.
- The spindle is motor-driven and stops when the contact point touches the workpiece. From then on, the maximum, minimum, or difference value can be measured using a constant measuring force.

High-accuracy measurement

 High resolution down to 0.01µm and a wide 50mm measurement range. The use of a low thermal-expansion material for the spindle and ceramic for the measuring table minimizes the effect of temperature variation during use. The unit is rust-free, simplifying maintenance and management.





*The stand (No.957460) is sold as an option.

Separate type VL-50S-B


Because the measuring unit and the display unit are separate, they can be integrated into the user's measurement system. An optional dedicated stand is also available.


Constant measuring force principle

An unbalanced, parallel-link structure enables the Litematic to offer a low and constant measuring force.

The Litematic's measuring force is not provided by a spring but comes from a structure resembling a balance scale. We call this a "parallel linkage." A motorized slider carrying the linked spindle moves down its guideway while the linkage is supported on a stop, as shown in Fig 1. When the spindle contacts the workpiece (Fig. 2) it moves the linkage up off the stop and the motor is halted. At this point the linkage is now supported by the workpiece, and thus a constant measuring force is applied.

Mitutoyo

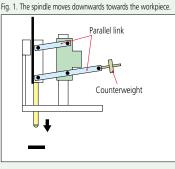

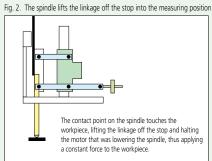

Example Measurement Applications





Film and sheet If the workpiece flexes, making accurate measurement impossible, using a type with a larger measuring force or adding a weight to the spindle may be effective 🕨 Film Flexible substrates Various types of sheet Media discs For this type of workpiece the smallest measuring force available is recommended. Media tape Hard disks Various types of disks Electronic components For this type of workpiece the smallest measuring force available is recommended. Printed circuit boards Connectors Battery components



LITEMATIC VL-50-B/50S-B

FUNCTIONS

VL-50-B/50S-B


• Control panel/Display Unit



Key	Function
1) Up	Moves the spindle up only while the key is pressed.
2) Down	Moves the spindle down only while the key is pressed. Used to touch the contact point on a workpiece to make a measurement.
3) Rapid Up	Moves the spindle up quickly only while the key is pressed.
4) Rapid Down	Moves the spindle down quickly only while the key is pressed.
5) ZERO	Sets the origin at any position of the spindle. Also, it zero-sets all display values for difference measurements. This key can be used to clear an error.
6) PRESET	Allows the currently displayed value to be set from the keyboard, irrespective c spindle position. Often used in conjunction with gauge blocks.
7) MODE	Selects and sets one of various measurement modes such as MAX/MIN measurement.
8) LIMIT	Enters tolerance limits for tolerance judgment.
9) TEACH	Sets up the position memory.
10) PM1 to PM3	Moves the spindle to a previously stored position with a single keystroke.

Indicator (LED)			
Indicator	Function		
11) GO/NG	Displays the result of a GO/NG judgment.		
12) Sign	Lights to display a minus value.		
13) MAX	Lights in the maximum value mode.	Both light when the measurement is	
14) MIN	Lights in the minimum value mode.	the difference type (MAX - MIN).	
15) WORK	Lights while a workpiece is being measure		
16) T.H.	Lights when a measurement value is he completed.	eld after measurement has been	
17) C.T.	Lights when the user compensation is set to ON. (Lights while the position memory is active.)		
18) UNIT	Lights while the unit of display values is mode.)	inch. (Lights in the external HOLD	

• Rear panel (switches and connectors)

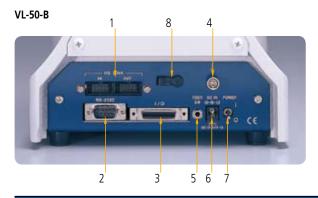

VL-50S-B 10 1

9 8 2 3 5 6 7 4

1) Measurement data output connector (OUT)	Outputs measurement data to a Digimatic mini-processor, etc.
RS-LINK connector (IN/OUT)	Connects multiple devices and can output measurement data from one RS-232 port.
2) RS-232C connector	For communication with a PC, etc.
3) External control connector	Used to connect this instrument to an external device for remote control.
4) GND terminal	-
5) Foot switch	Foot switch (optional) for controlling measurement operation is connected here.
6) DC IN	Input connector to receive power from the AC mains adapter.
7) Power switch	-
8) AC adapter cord clamp	Prevents AC adapter cord from pulling out.
9) CONTROL connector: for VL-50S-B only	Gage head connector.
10) INPUT connector: for VL-50S-B only	Gage head connector.



SPECIFICATIONS

VL-50-B/50S-B

Order No.		318-221	318-222	318-223	318-226	318-227	318-228	
Model		VL-50-B	VL-50-15-B	VL-50-100-B	VL-50S-B	VL-50S-15-B	VL-50S-100-B	
Measuring Rar	nge*1	0-50mm (0 - 2")						
Resolution (sel	ectable)	0.01/0.1/1.0µm (.0000005"/.00005")						
Display unit		Character height 14mm (.6")/8 digits (excluding "minus" sign)						
Scale type				Photoelectric	linear encoder			
Stroke				51.5mm (2") With st	tandard contact point			
Accuracy at 20	°C*²			(0.5+L/100)µm L = N	leasured length (mm)			
Accuracy guara temperature*3				20 1	= 1°C			
Repeatability*2				σ = 0	.05 µm			
Measuring for	ce*1	0.01N	0.15N	1N	0.01N	0.15N	1N	
Spindle feed	Measuring		Approx	. 2mm/s (.08"/s) or 4mm/s		arameter)		
speed	Quick feed			Approx. 8r	nm/s (.3"/s)			
Standard conta	act point			ø3mm ca	arbide ball			
Worktable		ø100	(Ceramic, grooved, repla	ceable)		_		
Input		Data can be input with the foot switch						
Output		SPC output RS-232C output (switching by parameter)						
Power supply		KS-232C output (switching by parameter) 85V to 264VAC (connected to AC adapter)						
Power consum	ption	Maximum 12W (12V, 1A)						
EC Directives		Standard EN61326-1:1997 AI 1998, Immunity test requirement AnnexA, Emission limit ClassB						
Main unit mas	S	19kg (35.2lbs) 6kg (11lbs)						
Standard acces	sories	AC adapter: No.357651 • Power cord • Grounding wire: No.934626 • Allen wrench (for replacing the interchangeable contact point)				ole contact point)		
		Foot switch: 937179T						
		Dedicated stand: 957460						
		Output connector (with cover): 02ADB440 (for external control)						
	RS-LINK/Digimatic connecting cable (1m): 936937 RS-LINK/Digimatic connecting cable (2m): 965014							
		Recommended interchangeable contact points: the following dial indicator interchangeable contact points are mountable.						
Ontional accor	corioc	Part No.: 120066 Measuring force*4: Approx 0.01N						
Optional accessories	Part No.: 101118 Measuring force *4: Approx 0.02N							
		Part No.: 120059 Measuring forc* ⁴ : Approx 0.03N						
	Part No.: 120060 Measuring force *4: Approx 0.06N							
		Note: When another contact point that has a flat measuring face is mounted, the contact point requires parallelism adjustment with respect to the table surface. Mounting this contact point should be custom-ordered from Mitutoyo.						
				parts: 02AZE375 Measu				
			Note: The above VL w	reights are dedicated to VI	L-50-B, VL-50-15-B, VL-5	OS-B, and VL-50S-15-B.		
			t is not recommended to	set a measuring force of	greater than 1N as this m	ay cause equipment failur	ę.	

 $^{\star1}\,$ 0.15N and 1N models are factory options.

*2 For normal measurement with the standard contact point (with smoothing set as "weak").

*3 Temperature variation must be gradual. The instrument must not be exposed directly to hot or cold drafts or direct sunlight.


*4 Additional measuring force that is applied when non-standard contact points or VL weights are used.

Note) Motor life is approximately 100,000 operations, after which replacement is advisable.

This maintenance factor is particularly important to bear in mind when the machine is used frequently, such as on a production line.

LITEMATIC VL-50-B/50S-B

DIMENSIONS

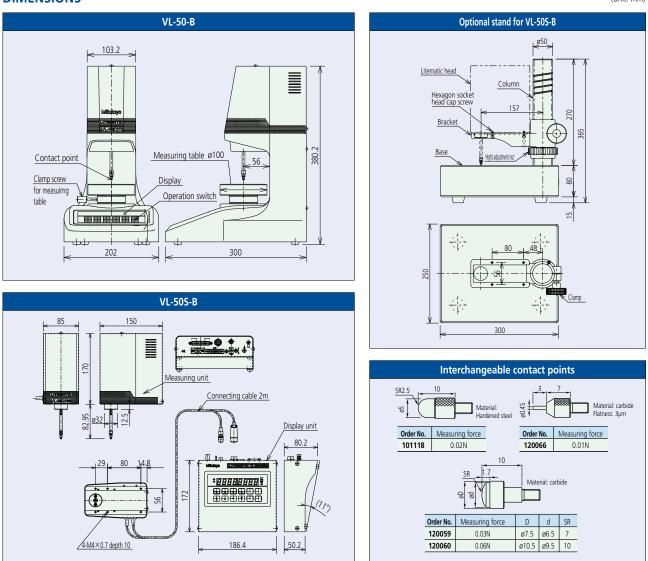

Note: When a contact point having a flat measuring surface, other than those described above, is installed, the measuring surface must be adjusted for parallelism with the table surface. This requires a special order.

• Optional weights for the Litematic (No. 02AZE375)

One of the notable characteristics of the Litematic is its small measuring force (0.01N or 0.15N models). However, depending on the characteristics of the workpiece, it may not be possible to transmit a sufficient measuring force and the contact point may appear suspended. To solve such a problem, optional weights are available that attach to the spindle to achieve the appropriate measuring force without damaging the workpiece.

*Cannot be used with VL-50-100-B, or VL-50S-100-B

Mitutoyo

Spindle with an optional weight installed



External appearance of optional weights



Measuring forces generated by weight combinations for 0.01/0.15N models

Measuring			В	c	
0.01	0.15	rod	~	Р	C
0.06	0.21	1			
0.16	0.31	1			1
0.26	0.41	1		1	
0.36	0.51	1		1	1
0.46	0.61	1	1		
0.56	0.71	1	1		1
0.66	0.81	1	1	1	
0.76	0.91	1	1	1	1
0.86	-	1	2		
0.96	-	1	2		1

• Connector terminal Function


1) Applicable plugNo.02ADB440 No.02ADB440 (with cover) Optional accessory

Pin No.	Signal name	Input/Output	Description (purpose)		
1	COM	_	Common terminal to input and output circuits (internally connected to GND)		
2	COM	_	Common terminal to input and output circuits (internally connected to GND)		
3	L1	OUT	Tolerance judgment output terminal		
4	L2	OUT	A related judgment terminal only outputs "L"		
5	L3	OUT	At error occurrence		
6	L4	OUT	.1, L5 = Outputs "L" 2, L3, L4 = Outputs "H"		
7	L5	OUT	12, 13, 14 = Outputs H		
10	NOM	OUT	Outputs "L" in the count mode.		
21	ULIMIT	OUT	Outputs "L" at the top dead point of the spindle.		
22	WORK	OUT	Outputs "L" upon detection of a workpiece.		
25	SET1	IN	Specifies peak selection/motor speed in combination with SET.		
26	SET2	IN	specifies peak selection/motor speed in combination with sel.		
28	MODE	IN	Peak mode SET2 SET1 Current value H H MAX H L MIN L H TIR L L		
30	UP	IN	Motor control: Specifies a spindle ascent speed along with SET. Speed When changing the spindle speed, stops the spindle once and allows 50ms or more before change. 8mm/s 5mm/s H H 4mm/s 3mm/s H L 2mm/s 2mm/s L H 1mm/s 1mm/s L L		
			Motor control: Specifies a spindle ascent speed along with SET.		
			Speed When changing the spindle speed, stops the spindle once and allows 50ms		
31	DN	IN	8mm/s 5mm/s H H or more before change.		
			4mm/s 3mm/s H L 2mm/s 2mm/s L H		
			1mm/s 1mm/s L L		
32	FSW	IN	Motor control: Same function as that of foot switch.		
			The display value is held during input.		
34	HOLD	IN	At error occurrence the error is cleared at the leading edge of this signal.		
35	P.SET	IN	Executes presetting. Peak clear: The peak value is cleared upon input of the signal during the HOLD signal input in the Peak mode.		
	N.C.		Unconnected terminals		


Applicable plug specification Applicable plug spectreater: 10136-3000VE (3M: Plug) 10336-52AO-008 (3M: Cover) DX40M-36P (Hirose: Plug) DX30M-36-CV (Hirose: Cover) ¢ ¢

(3) Input/output circuit


1. Output circuit: When the signal goes to "Low," the transistor turns on. (Open collector output)

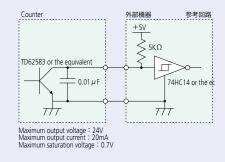

2. Input circuit: When the signal goes to "Low," the input is enabled.

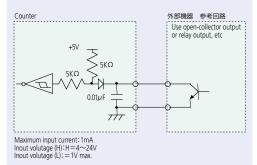

(4) Timing Chart

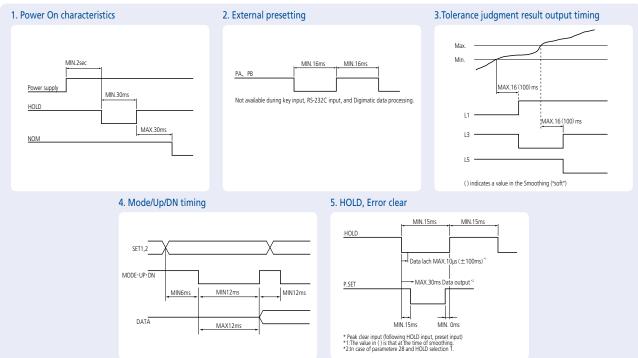

• RS-232C Communication Function

(1) List of commands

Command format	Response output	Operation content
GA * * CRLF	G#**, +01234.567CRLF	A display value is output via RS-232C. "* * " indicates gage channel numbers 01 to 99 (all channel number to 01 "#" indicates the type of data (N: current value, X: maximum value, M: minimum value, and W: TIR/CRLF stands for carriage return (CR) and line feed (LF).
CN * * CRLF	CH * * CRLF	The display is switched to the current value.
CX * * CRLF	CH * * CRLF	The display is switched to the maximum value.
CM * * CRLF	CH * * CRLF	The display is switched to the minimum value.
CW * * CRLF	CH * * CRLF	The display is switched to the TIR value.
CR ** CRLF	CH * * CRLF	The display is zero-set.
CL **CRLF	CH * * CRLF	The peak value is cleared.
CP **++01234567CRLF	CH * * CRLF	The preset value is input. Input a preset value and a tolerance limit with a sign and a numeric value of 8 digits without appending a decimal point.
CD * * ,+ 01234567CRLF	CH * * CRLF	Input tolerance limit S1. Perform tolerance setup in the order of CD and CG for 3-step tolerance judgment, and in the order of CD, CE, CF, and CG for 5-step tolerance judgment. An error message is output if there is a difference in tolerance limit order, or in the number of steps between the setting and data to be sent, or if incorrect data exists. If this is the case, repeat setup from the beginning of the CD command.
CE **,+01234567CRLF	CH * * CRLF	Input tolerance limit S2.
CF **,+01234567CRLF	CH * * CRLF	Input tolerance limit S3.
CG **,+01234567CRLF	CH * * CRLF	Input tolerance limit S4.
CS **CRLF	CH * * CRLF	An error is canceled.
VS **,+\$CRLF	CH * * CRLF	Spindle control Sign +: Moves up the spindle., -:Moves down the spindle. \$: Speed specification 0: Stop 1: 2mm/s 2: 4mm 3: 8mm/s approx.
VT **,+\$CRLF	CH * * ,#CRLF	Status of spindle condition In place of #, 0: Normal 1: Upper dead point limit 2: WORK ON Channel number 00 cannot be used.

(2) Pin assignment


	Receptacle specification: D-sub 9-p Applicable plug specification: D-sub Commercial cable examples: For DOS/V: KRS-403XF1K (1.5m) For PC-98 series: KRS-423XF1K (o 9-pin (female), inch thread spec. , Sanwa Supply Corp.	
Pin No.	Signal name	Input/Output	Definition
2	RXD	IN	Receive data
3	TXD	OUT	Transmit data
4	DTR	OUT	Data terminal ready
5	GND	-	Ground
6	DSR	IN	Data set ready
7	RTS	OUT	Request to send
8	CTS	IN	Clear to send
1, 9	N.C.	_	Unconnected

(3) Communication protocol (EIA RS-232C compatible)

Home position	DTE (terminal) and cross cable are to be used.
Communication method	half-duplex, non-procedural
Baud rate	4800, 9600, 19200bps
Bit configuration	Start bit: 1 Data bits: (7 or 8) ASCII, uppercase Parity bit: None, even or odd Stop bits: 2
Communication condition setup	Set with parameters.

(4) Timing Chart

 6. RS-232C command input and response output



RS-232C data output time

The maximum output time when the all-data-output command (GA00CRLF) is used can be calculated using the following formula:

Maximum output time [ms] = counter connection count X 20 + connected channel X 17 (8.5) + 6 (3) *At a transfer speed of 9,600 bps; figures inside () indicate values [in ms] when the speed is 19,200 bps. (Calculation example) 1 VL unit = MAX43 (31.5) ms (Note: The processing time by the personal computer is not included.)

Printer

Digimatic mini processor DP-1VR No. 264-504

Prints the Digimatic output from Litematic.

Connecting cable (No.936937)

Note: All information regarding our products, and in particular the illustrations, drawings, dimensional and performance data contained in this pamphlet, as well as other technical data are to be regarded as approximate average values. We therefore reserve the right to make changes to the corresponding designs, dimensions and weights. The stated standards, similar technical regulations, descriptions and illustrations of the products were valid at the time of printing. Only quotations submitted by ourselves may be regarded as definitive.

The successful and the summarized mean sequences, descriptions and management of the products refer than a to be printing, thing documents summarized by our circle Our products are classified as regulated items under Japanese Foreign Exchange and Foreign Trade Law. Please consult us in advance if you wish to export our products to any other country. If the purchased product is exported, even though it is not a regulated item (Catch-All controls item), the customer service available for that product may be affected. If you have any questions, please consult your local Mitutopo sales office. Export permission by the Japanese government may be required for exporting our products according to the Foreign Exchange and Foreign Trade Law. Please consult our sales office near you before you export our products or you offer technical information to a nonresident.

Coordinate Measuring Machines
Vision Measuring Systems
Form Measurement
Optical Measuring
Sensor Systems
Test Equipment and Seismometers
Digital Scale and DRO Systems
Small Tool Instruments and Data Management

Mitutoyo Corporation

20-1, Sakado 1-chome, Takatsu-ku, Kawasaki-shi, Kanagawa 213-8533, Japan T +81 (0) 44 813-8230 F +81 (0) 44 813-8231 http://www.mitutoyo.co.jp

