

Roundness/Cylindricity Measurement

ROUNDTTEST RA-1600

Catalog No.E15000(2)



A new PC-compliant roundness and cylindrical-form measuring instrument with extensive analysis features to enable measurement of a wide variety of workpieces

Mitutoyo

Powerful Analysis Performance in a Compact Form

ROUNDTEST RA-1600

Can measure a wide variety of workpieces

Realizes a wide measuring range in a compact form

- Max. probing diameter: 280 mm
- Vertical travel: 300 mm
- Max. table loading: 25 kg

Multi-functional analysis system

Incorporates flexible data analysis software ROUNDPAK

- Measurement results displayed in a graphics window
- Easy to operate thanks to a simplified measurement mode
- Can simulate a part program

High accuracy

Compact, but with top-end precision

- Rotational accuracy (Radial): $(0.02+6H/10000) \mu\text{m}$
- Rotational accuracy (Axial): $(0.02+6X/10000) \mu\text{m}$
- Accuracy assurance: Z axis (Straightness, Parallelism),
X axis (Straightness, Squareness)

High Functionality

- Includes a detector to prevent damaging collisions in the z axis
- High-precision power column unit can evaluate straightness as well as cylindricity
- Equipped with D.A.T. mechanism to boost measurement efficiency
- Includes a remote control box for easy operation



Mitutoyo

High-level functions promote greater efficiency

Equipped with a highly accurate turntable that enables simple and accurate centering and leveling of the workpiece

The table provides high rotational accuracy (radial 0.02+6H / 10000 μm ; axial 0.02+6X/10000 μm), enabling the system to measure flatness and other characteristics, in addition to roundness/cylindricity, at a level that suits any application.

The RA-1600 has also inherited the D.A.T. (Digital Adjustment Table) mechanism used in top-end devices to make workpiece centering and leveling quick and easy. The operator simply has to manipulate the digital micrometer heads of the turntable to match the adjustment values displayed on the monitor.


Even notched workpieces can be measured accurately. Centering and leveling operations carried out by using the D.A.T.* can also be incorporated into the measurement procedure (part program). This prevents human errors when performing centering and leveling, and helps standardize measurement operations executed by the part program.

*Centering and leveling is a manual process guided by the display.

D.A.T. (Digimatic Adjustment Table)

A guidance system (D.A.T.) is incorporated into the turntables on the RA-2200DS/DH models to help the operator perform manual centering and leveling smoothly and simply.


Patent registered in Japan, USA
Patent pending in Germany

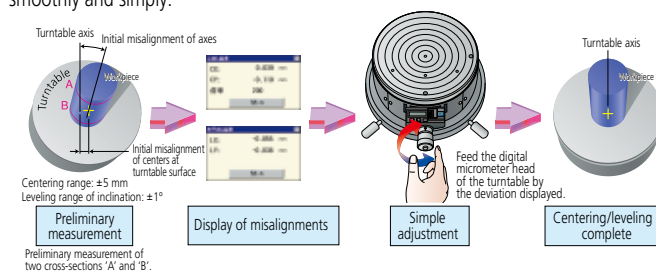

Continuous OD/ID measurement function


Patent registered in Japan, USA, Germany, UK, France

Continuous internal/external diameter measurement is possible without changing the detector position.

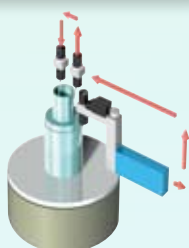

Partial circle measurement function

Even if a workpiece cannot be measured by physically rotating it by a full turn due to some obstruction (projection), segments of the circumference can be measured.

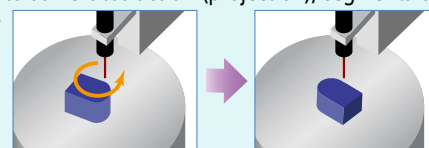

Spiral Measurement/Analysis

The spiral-mode measurement function combines table rotation and rectilinear action allowing cylindricity, coaxiality, and other measurement data to be loaded as a continuous data set.



Safety mechanism provided as a standard feature



A collision-sensing function has been added to the detector unit (when it is in the vertical orientation) to prevent collision in the Z-axis direction. Additionally, an accidental collision prevention function, which stops the system when the detector displacement exceeds its range, has been added. When an accidental touch is detected, the dedicated analysis software (ROUNDPAK)

senses the error and automatically stops the system.

Measurement through X-axis tracking

Measurement while tracing is possible through a built-in linear scale in the X-axis. This type of measurement is useful when displacement due to form variation exceeds the measuring range of the detector, and X-axis motion is necessary to maintain contact with the workpiece surface.



Sliding detector-unit holder provided as a standard feature (Option)

The detector-unit holder is equipped with a sliding mechanism, enabling one-touch measurement of a workpiece with a deep hole having a thick wall, which has been difficult with the conventional standard arm.

Sliding distance: 112 mm



The detector-unit holder can be stopped at a position sufficiently higher than the workpiece along the Z-axis, and then lowered and positioned to make measurements.

Furthermore, internal/external diameters can be easily measured with the continuous internal/external diameter measurement function*.

*: See this page for details about the continuous ID and OD measuring function.


Specifications

Specifications

Model No.			RA-1600
Order No.			211-723
Turntable unit	Rotational accuracy	Radial direction	(0.02+6H / 10000) μ m H: Measuring height with reference to turntable surface (mm) JIS B7451-1997
		Axial direction	(0.02+6X / 10000) μ m X: Radial distance with reference to turntable axis (mm)
	Rotational speed		4, 6, 10 rpm
	Effective table diameter		ϕ 150 mm
	Centering / leveling adjustment		D.A.T.
	Centering adjustment range		$\pm$ 3 mm
	Leveling adjustment range		$\pm$ 1°
	Maximum loading		25 kg
	Maximum probing diameter		ϕ 280 mm
	Maximum workpiece diameter		ϕ 560 mm
Vertical drive unit (Z-axis column unit)	Straightness of drive	Narrow range	0.20 μ m / 100 mm
		Wide range	0.30 μ m / 300 mm
	Parallelism with turntable axis		1.5 μ m / 300 mm
	Traverse speed		Max. 15 mm/s (Measurement: 0.5, 1, 2, 5 mm/s)
	Maximum probing height (ID / OD)		300 mm ^{*1}
Radial drive unit (X-axis arm unit)	Straightness of drive		2.7 μ m / 140 mm
		Perpendicularity to turntable axis	1.6 μ m / 140 mm
	Traverse range amount		165 mm (From table axis -25 mm ~ +140 mm)
	Traverse speed		Max. 8 mm/s (measurement: 0.5, 1, 2, 5 mm/s)
Detector	Measuring force		10 ~ 50 mN (5 level switching) (ID/OD measuring position with standard stylus)
	Measuring range	Standard	$\pm$ 400 μ m / $\pm$ 4 μ m / $\pm$ 4 μ m
		Tracking	$\pm$ 5 mm
	Tip shape, material		ϕ 1.6 mm tungsten carbide
Other	Other		IN/OUT one-touch switching, Stylus angle scale markings ($\pm$ 45°), Z-axis collision detection function
	Power supply		100 V ~ 240 V
	Power consumption		80 W
	Air pressure		0.39 MPa
	Air consumption		22 L/min (standard state)
	Mass of main unit (NET)		170 kg

*1: Use an optional auxiliary stage for measuring a workpiece whose height is 20 mm or less.

Dimensions

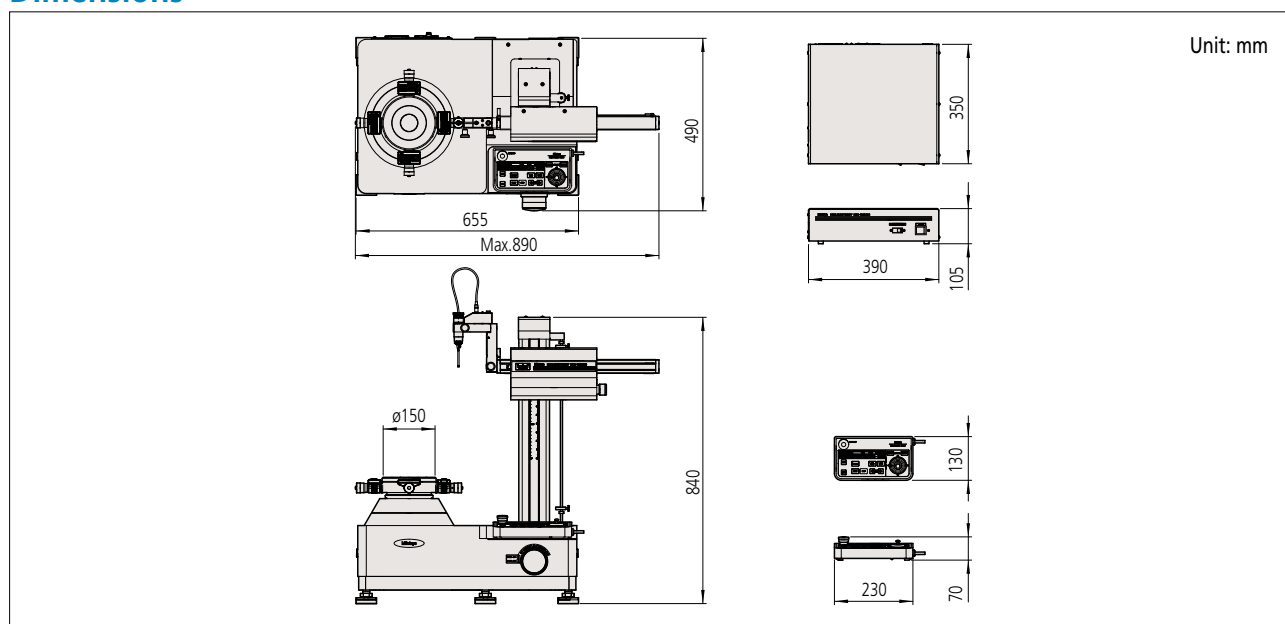

Optional Accessories

Styli for RA-1600 (Option)


Type	Standard (Standard accessory)	Notch	Deep groove	Corner	Cutter mark
Order No.	12AAL021	12AAL022	12AAL023	12AAL024	12AAL025
Stylus tip	ø 1.6 mm tungsten carbide	ø 3 mm tungsten carbide	SR0.25 mm sapphire	SR0.25 mm sapphire	tungsten carbide
Dimensions (mm)					
Type	Small hole (ø 0.8)	Small hole (ø 1.0)	Small hole (ø 1.6)	Extra small hole (Depth 3 mm)	ø 1.6 mm ball
Order No.	12AAL026	12AAL027	12AAL028	12AAL029	12AAL030
Stylus tip	ø 0.8 mm tungsten carbide	ø 1 mm tungsten carbide	ø 1.6 mm tungsten carbide	ø 0.5 mm tungsten carbide	ø 1.6 mm tungsten carbide
Dimensions (mm)					
Type	Disk	Crank (ø 0.5)	Crank (ø 1.0)	Flat surface	2X-long type *1
Order No.	12AAL031	12AAL032	12AAL033	12AAL034	12AAL035
Stylus tip	ø 12 mm tungsten carbide	ø 0.5 mm tungsten carbide (Depth 2.5 mm)	ø 1 mm tungsten carbide (Depth 5.5 mm)	tungsten carbide	ø 1.6 mm tungsten carbide
Dimensions (mm)					
Type	2X-long type notch *1	2X-long type deep groove *1	2X-long type corner *1	2X-long type cutter mark *1	2X-long type Small hole *1
Order No.	12AAL036	12AAL037	12AAL038	12AAL039	12AAL040
Stylus tip	ø 3 mm tungsten carbide	SR0.25 mm sapphire	SR0.25 mm sapphire	tungsten carbide	ø 1 mm tungsten carbide
Dimensions (mm)					
Type	3X-long type *1	3X-long type deep groove *1	Stylus shank	Stylus shank (standard groove)	Stylus shank (2X-long groove) *1
Order No.	12AAL041	12AAL042	12AAL043	12AAL044	12AAL045
Stylus tip	ø 1.6 mm tungsten carbide	SR0.25 mm sapphire	For mounting CMM stylus (mounting thread M2)	For mounting CMM stylus (mounting thread M2)	For mounting CMM stylus (mounting thread M2)
Dimensions (mm)					

*1: Measuring is only possible in the vertical direction.


*2: Customized special interchangeable styli are available on request. Please contact any Mitutoyo office for more information.

Detector holders


2X extension holder: 12AAF203

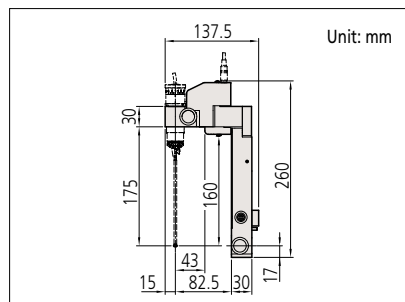

Auxiliary holder for a large-diameter workpiece: 12AAF204

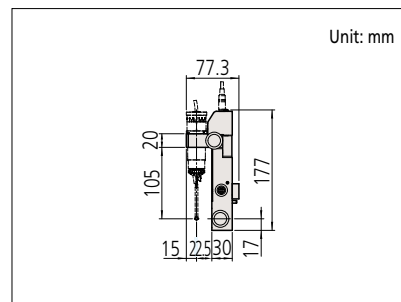

Sliding detector holder: 12AAL090

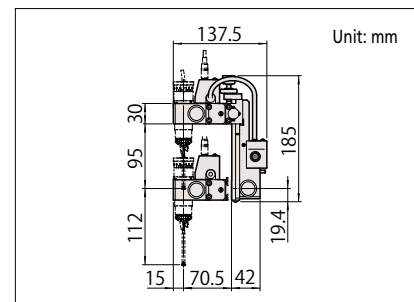

Optional Accessories



•Centering chuck (key operated)

211-014

Suitable for holding longer parts and those requiring a relatively powerful clamp.

- Holding capacity:
Internal jaws: OD = $\varnothing 2$ - $\varnothing 35$ mm,
ID = $\varnothing 25$ - $\varnothing 68$ mm
External jaws: OD = $\varnothing 35$ - $\varnothing 78$ mm
- External dimensions: $\varnothing 157 \times 70.6$ mm
- Mass: 3.8 kg



•Centering chuck (ring operated)

211-032

Suitable for holding small parts with easy-to-operate knurled-ring clamping.


- Holding capacity:
Internal jaws: OD = $\varnothing 1$ - $\varnothing 36$ mm,
ID = $\varnothing 16$ - $\varnothing 69$ mm
External jaws: OD = $\varnothing 25$ - $\varnothing 79$ mm
- External dimensions: $\varnothing 118 \times 41$ mm
- Mass: 1.2 kg



•Micro-chuck 211-031

Used for clamping a workpiece (less than $\varnothing 1$ mm dia.) that the centering chuck cannot handle.

- Holding capacity: $\varnothing 0.1$ - $\varnothing 1.5$ mm
- External dimensions: $\varnothing 107 \times 48.5$ mm
- Mass: 0.6 kg

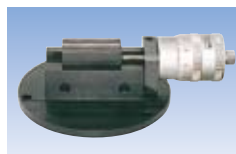

•Magnification calibration gage

211-045

Used for normalizing detector magnification by calibrating detector travel against displacement of a micrometer spindle.

- Maximum calibration range: 400 μ m
- Graduation: 0.2 μ m
- External dimensions: 235 (max)
 $\times 185 \times 70$ mm
- Mass: 4 kg

•Cylindrical square 350850

- Straightness: 1 μ m
- Cylindricity: 2 μ m
- External dimensions: $\varnothing 70 \times 250$ mm
- Mass: 7.5 kg

•Optical flat and gage block set

997090



•Reference hemisphere*

211-016

*Standard accessory
for RA-1600



•Auxiliary stage 356038



Vibration isolator

When using roundness and cylinder form measuring instruments, the measurement results can be significantly affected by environmental disturbances such as vibration. To prevent this, we invite you to choose from our selection of vibration isolators, which includes a table-type vibration isolator with an optional stand and two deluxe isolators (a monitor arm type and a side table type).


Desktop type*



*The vibration isolator does not include the measuring unit, controller, or analysis system.

Order No.	178-025
Vibration damping system	Diaphragm type air spring
External size	765×565×51 mm

Stand for 178-025

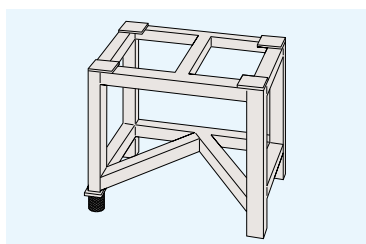

Desk type*

Vibration isolator with monitor arm



Vibration isolator with side table



*The vibration isolator does not include the measuring unit, controller, or analysis system.

Mitutoyo

Roundness/Cylindricity measurement/Analysis software

ROUNDPAK

ROUNDPAK provides simple manipulation using a mouse and icons


Simple operations even with a full set of parameters and analysis functions

A wide variety of parameters including those for roundness/cylindricity, as well as flatness and parallelism, are provided as standard features. You can visually select these parameters using icons.

ROUNDPAK also comes with specialized functions, such as the design value best-fit analysis function, the harmonic analysis function, and a function for recording the peak or trough points on a circumference. Data that has already been collected can be easily used for re-calculation, or deleted.




Recalculation

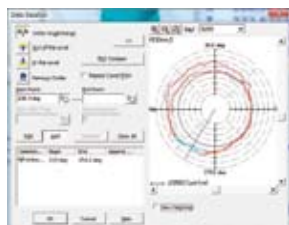

Data deletion


Freedom in laying out the graphics and data obtained from measurements

The customer can create reports in custom formats by specifying how the analysis results will be displayed, as well as the sizes and positions of graphics. The analysis result window can be directly utilized as a layout window. Since the measurement procedure, including the layout information, is saved, the entire process, from measurement start, calculation, result saving, and finally to printing, can be automatically executed.

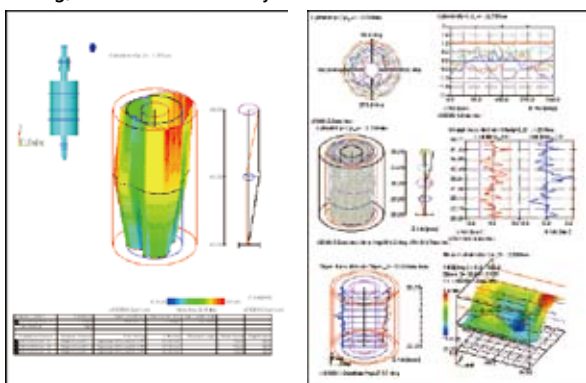

A wide variety of graphics functions

Analysis results such as cylindricity and coaxiality can be visually expressed in 3D graphics.


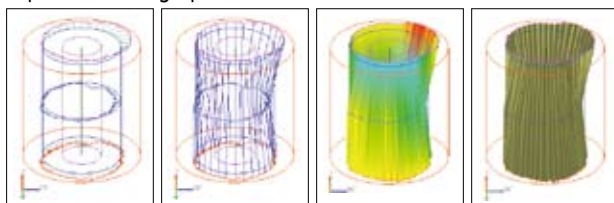


Normal display

Wire-frame display

Surface-map display


Shading display

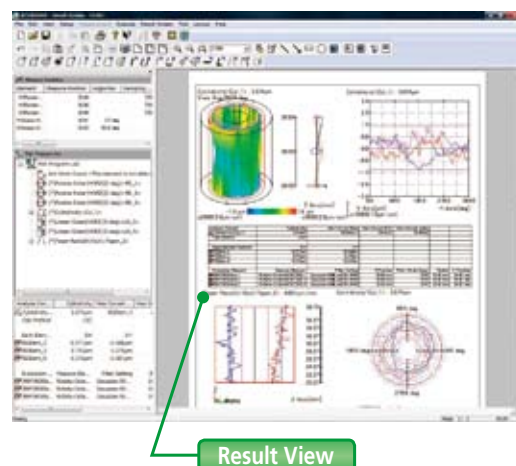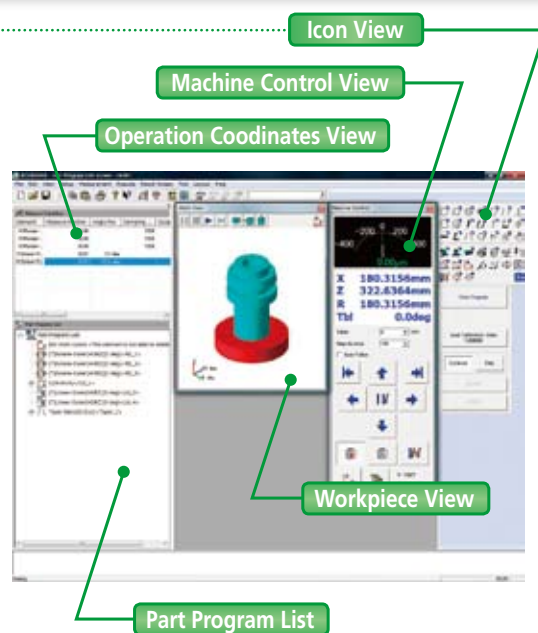

Result View

Off-line measurement procedure programming function

Patent registered in Japan, USA
Patent pending in Europe

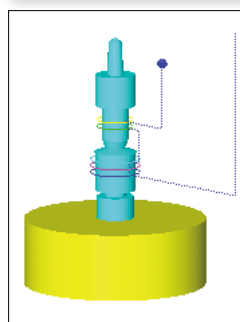

An offline teaching function is provided to create a part program (measurement procedure) without an actual measurement target, enabling the user to virtually execute the measurement operation in a 3D simulation window.



Export permission by the Japanese government may be required for exporting our products according to the Foreign Exchange and Foreign Trade Law. Please consult our sales office near you before you export our products or you offer technical information to a nonresident.

Coordinate Measuring Machines

Vision Measuring Systems

Form Measurement

Optical Measuring

Sensor Systems

Test Equipment and
Seismometers

Digital Scale and DRO Systems

Small Tool Instruments and
Data Management

Mitutoyo Corporation

20-1, Sakado 1-Chome,
Takatsu-ku, Kawasaki-shi,
Kanagawa 213-8533, Japan
T +81 (0) 44 813-8230
F +81 (0) 44 813-8231
<http://www.mitutoyo.co.jp>

Mitutoyo

Note: All information regarding our products, and in particular the illustrations, drawings, dimensional and performance data contained in this pamphlet, as well as other technical data are to be regarded as approximate average values. We therefore reserve the right to make changes to the corresponding designs, dimensions and weights. The stated standards, similar technical regulations, descriptions and illustrations of the products were valid at the time of printing. Only quotations submitted by ourselves may be regarded as definitive.
Our products are classified as regulated items under Japanese Foreign Exchange and Foreign Trade Law. Please consult us in advance if you wish to export our products to any other country. If the purchased product is exported, even though it is not a regulated item (Catch-All controls item), the customer service available for that product may be affected. If you have any questions, please consult your local Mitutoyo sales office.